

# Western Instruments

Established 1965

Portable MPI Equipment - Pit Gauges - UT Systems - NDT Accessories


## Versatile MPI Kits



Phone: (780) 459-6720 Fax: (780) 459-7837

E-Mail: [info@westerninstruments.com](mailto:info@westerninstruments.com)

Web: [www.westerninstruments.com](http://www.westerninstruments.com)

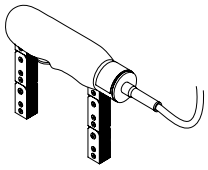

## Dry Method MPI Kits

All Kits are supplied with Western's 12 Page Operator Instructions.



### W-DMB, Basic Dry Method Kit (Illustrated with a WC-9)

- Carrying Case.
- 1 x 1.75 lbs. (0.8kg) Container of Dry Powder (White, Yellow, Red, or Black).
- Powder Bulb.
- Field Indicator (Magnetometer).
- Detailed Operator Instructions.

Note: WC-9 is complete with Battery Charger, and Battery Meter



### W-DM Deluxe Dry Method Kit (Illustrated with a WC-8)

- Carrying Case.
- 4 x 1.75 lbs. (0.8kg) Containers of Powder (White, Yellow, Red, Black).
- Powder Bulb.
- Field Indicator (Magnetometer).
- Detailed Operator Instructions.

Note: WC-8 is complete with Battery Pack, and Battery Charger



### **W-WMB Basic Wet Method Kit** (Illustrated with a WM-5LT)

- Carrying Case
- Field Indicator (Magnetometer)
- Wire Brush
- Operator Instructions
- Aerosol Cans of;
  - 1-Cleaner/Remover
  - 1-White Contrast Paint
  - 1-Black Prepared Bath

Note: W-WMB Kit can be supplied with any model of W-Series Yoke



### **W-WD Wet/Dry Method Kit** (Illustrated with WC-6)

- Carrying Case
- Aerosol Cans of;
  - 1 - White Contrast Paint
  - 1 - Black Bath
  - 2 - Cleaner/Remover
- 4 x 2 lbs. (1 kg) Containers of Powder (White, Yellow, Red, Black).
- Powder Bulb.
- Operator Instructions
- Field Indicator (Magnetometer).

Note: W-WD Kit can be supplied with any model of W-Series Yoke



### **W-WM Wet Visible Kit** (Illustrated with WE-7)

- Carrying Case
- Centrifuge Tube or 2 Castrol Strips
- Field Indicator (Magnetometer).
- Operator Instructions
- Aerosol Cans of;
  - 2 – White Contrast Paint
  - 2 – Black Particle Bath
  - 4 – Cleaner Remover

Note: W-WM Kit can be supplied with any model of W-Series Yoke



### **W-WF Wet Fluorescent Kit** (Illustrated with WE-7)

- Carrying Case
- Centrifuge Tube or 2 Castrol Strips
- Field Indicator (Magnetometer).
- UV Lamp c/w Carrying Case
- Spectroline CH-50/12 (12 Volt) Black Light  
c/w Carrying Case, Western Instruments' Battery and Battery Charger.  
Options for BIB-150P or SB-100P Black Lights.
- Aerosol Cans of; (375ml /16 oz.)
  - 4 – Fluorescent Particle Bath
  - 4 – Cleaner Remover
- Operator Instructions

Note: W-WF Kit can be supplied with any model of W-Series Yoke